


Evolution Jumbo

EK302*




*EK302 - 2 x 2 Jumbo

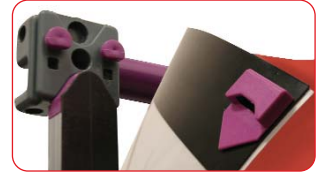

Quick Hanger Fitting



Xpress Hanger Fitting

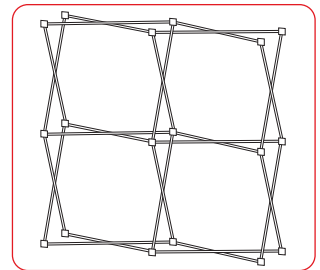

Larger scissors reduce the number of pop-up 'panels' and graphic drops resulting in a budget pop-up display

features & benefits

- Fewer mag bars make it the low cost choice
- Quality anodised aluminium finish (Xpress) or powdercoated finish (Quick)
- Frame only, graphic hanging kit or fabric panel kit options
- Available in either Quick or Xpress versions
- Option for graphics to be displayed on both sides
- Economical to print (900mm width panels)
- Available as curved systems 2 x 2 or 2 x 3

Graphic Panel Sizes

	2 Quads high
Height	1996

Curved Widths

	Front Panel	Rear Panel	D-End
	900	1090	675

All measurements are in millimeters (mm)

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE.

Assembly Instructions



Graphic panel finishing
Remove the backing paper from the graphic hanger.




Apply the hanger to the top inside edge of the panel ensuring that it is flush to the panel edge.




Remove the backing paper from the kicker and apply it to the bottom edge of the panel.



Remove the backing paper from the mag tape. Apply to both sides of the panel, keeping it flush to the edge.

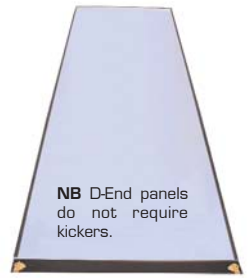


NB D-End panels do not require kickers.

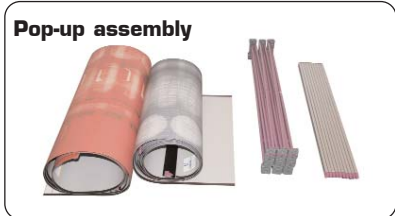


Pop-up assembly
Kit: Mag Bars (for exact number see table below), frame, D-End Graphics x 2 and Front and/or rear graphic panels (not supplied)




1 Take the frame, ensuring that the coloured nodes or studs are at the top.

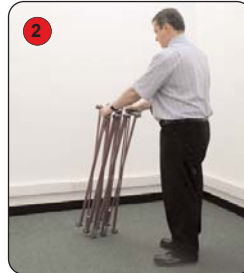

2 Stand the frame on the floor

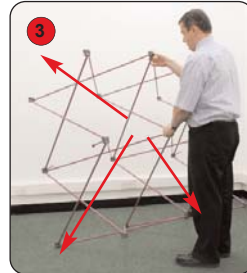


3 Open up (3) until the locking arms click the frame securely into place (4)

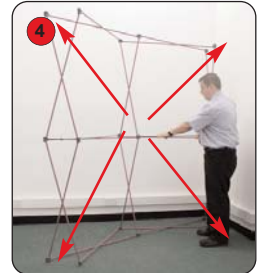


4

Take the frame, ensuring that the coloured nodes or studs are at the top. Stand the frame on the floor (2) and open up (3) until the locking arms click the frame securely into place (4)

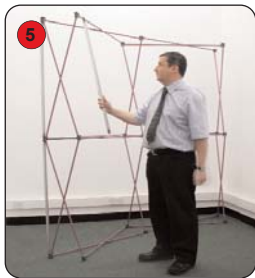


5 Add the mag bars onto the system for front, D-ends and if applicable, the rear.

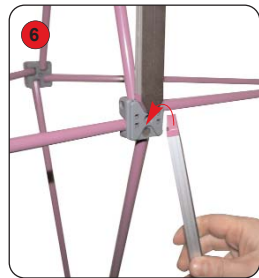


6 Ensure that the mag bars lock onto the magnetic pip securely.



7 Unwrap each graphic carefully and attach to the system.

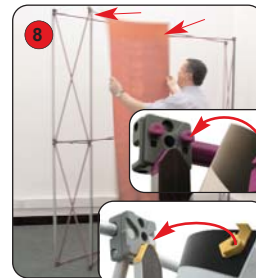

8 Carefully hook the top hanger onto the top node on each side of the quad.

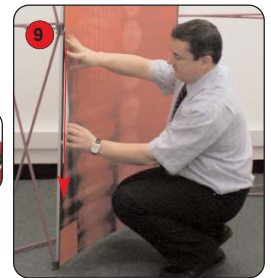

9 Smooth the graphic onto the mag bars, ensuring that it sits flat and is aligned to the centre line of each mag bar.



10 Repeat for the D-End, ensuring that the fit is correct.



11 Repeat steps 8 and 9 for the rest of the graphics on the unit. This applies to front and rear graphics if applicable. Finally, attach the 2nd D-End.




12





Important note:

Remove all mag bars before collapsing the frame.

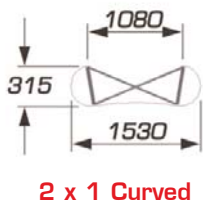

2 x 1 Curved

2 x 3 Curved

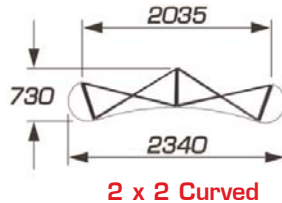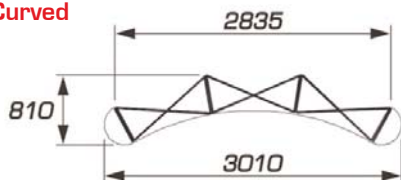

2 x 2 Curved

Evolution Jumbo - Technical Data

2 x 1 - 8 mag bars, 1 front curved & 2 D-End hangers. Double-sided 8 mag bars, 1 front curved, 1 rear curved & 2 D-End hangers.

2 x 2 - 10 mag bars, 2 front curved & 2 D-End hangers. Double-sided 12 mag bars, 2 front curved, 2 rear curved & 2 D-End hangers.

2 x 3 - 12 mag bars, 3 front curved & 2 D-End hangers. Double-sided 16 mag bars, 3 front curved, 3 rear curved & 2 D-End hangers.

(All dimensions are approx and are in mm)